


INSTALLATION METHOD #1 - R-8 Insulation with Spacer Strips

1. 2" wide spacer strips to be wrapped around the perimeter of the duct (spacers strips are included with the BIG-8 product). Spacer strips to be installed at 2' intervals.
2. Wrap EcoFoil insulation around the duct with spacers and pull hand-tight (for and R-8 value). Ensure that the printed Code Certification Strip, taped the entire length of the roll, is facing out. This information must be visible to inspectors.
3. Tape all seams and joints using EcoFoil Metalized tape, specially formulated to adhere to EcoFoil Duct Insulation.
 - Item Code EF15212 (2" x 150')
 - Item Code EF15213 (3" x 150')
 - Use of any tape other than the EcoFoil items above will void the manufacturer's warranty
4. Properly installed, the spacers will provide a consistent airspace around the duct.
5. Repeat the above steps for the entire length of the ductwork.

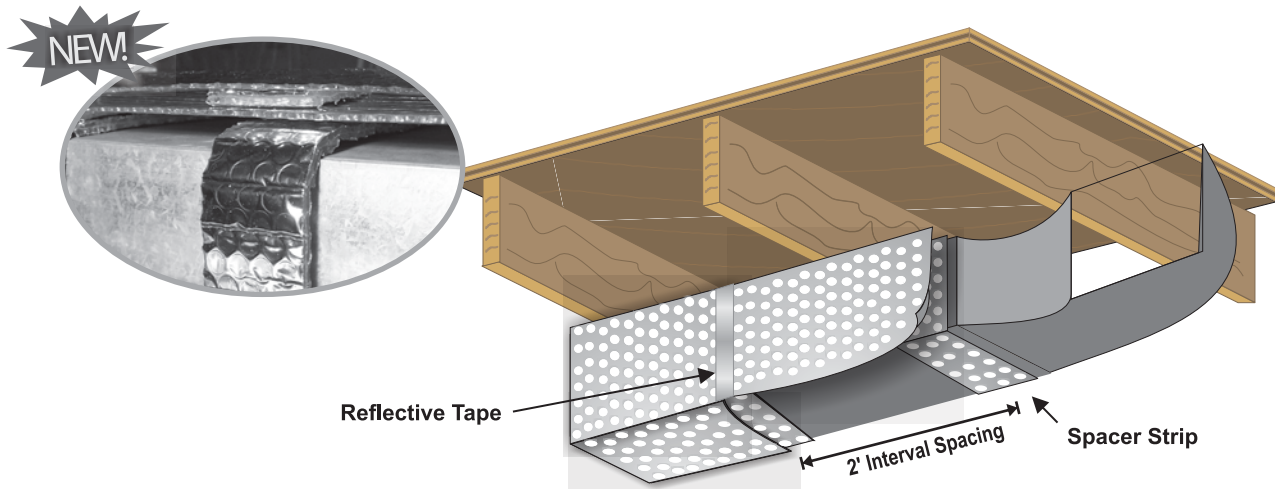

(ICC-ES Evaluation Report ESR-1236)

*R8 Spacer Wrap for an R-8 Value With Spacer Strips.
(Spacer Strips included with the R8 product)*

SUGGESTED PRODUCTS FOR THIS APPLICATION:

- EcoFoil REFLECTIVE INSULATION > EF2280-48-050
EcoFoil REFLECTIVE TAPE > EF15212 (2" x 150'), EF15213 (3" x 150')

Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of EcoFoil Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of EcoFoil Reflective Insulation products, and EcoFoil makes no claims that these construction systems are universally accurate.

Exercise caution when using EcoFoil Reflective Insulation products near and around electrical wiring and devices.